



# AutoISO-2500 ADAPTER



## USER MANUAL

Version 1.2 22.02.2021

### Note:

AutoISO-2500 adapter is not a stand-alone measuring device. It is an accessory designed to cooperate with MPI-525 multifunction electrical installations meter and MIC-2510 insulation resistance meter. Before measurements, please read the manual of the relevant meter (MPI-525 or MIC-2510).

### Note:

The manufacturer reserves the right to introduce changes in the design, accessories and technical data of the adapter.

## 1 Safety

AutoISO-2500 adapter is used to measure the insulation resistance of cables and wires with 3, 4, and 5 conductors (in cooperation with one of the above meters). In order to provide conditions for correct operation, the following recommendations must be observed:

- Before you proceed to operate the device, acquaint yourself thoroughly with this manual and observe the safety regulations and specifications defined by the producer
- Any application that differs from those specified in the present manual may result in a damage to the device and constitute a source of danger for the user.
- The adapter should be operated only by suitably qualified persons having the necessary permissions to carry out measurements on

electrical systems. Operating the adapter by unauthorised personnel may result in damage to the device and constitute a source of danger for the user.

- The adapter must not be used for networks and devices in areas with special conditions, e.g. fire-risk and explosive-risk areas.
- It is unacceptable to operate the device when:
  - ⇒ it is damaged and completely or partially out of order,
  - ⇒ its cable insulation is damaged,
  - ⇒ it was stored for an excessive period of time in disadvantageous conditions (e.g. excessive humidity). **After moving the device from a cool to a warm place with a high level of relative humidity, do not start measurements until the device is warmed up to the ambient temperature (approximately 30 minutes)**
- Repairs may be performed only by an authorized service point.

## 2 Description of adapter outputs

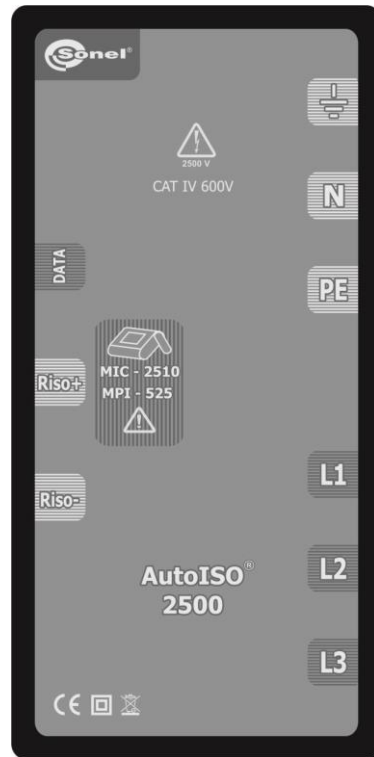


Fig. 1. AutoISO-2500 adapter (front panel)

### 1 DATA

A cable for connecting the adapter to an appropriate port of the meter (adapter control).

### 2 Riso+, Riso-

Cables for connecting the adapter to appropriate ports of the meter with measuring voltage  $U_{iso}$ .

### 3 L1, L2, L3, N, PE

Cables for connecting the adapter to appropriate conductors of the tested/measured cable (wire).

### ATTENTION!

The adapter may be damaged when connected to the voltage exceeding 600 V AC.

### 4

A cable to connect the adapter to earth.

## 3 Cleaning and maintenance

### ATTENTION!

Use only the maintenance methods specified by the manufacturer in this manual.

The adapter may be cleaned with a soft, damp cloth using all-purpose detergents. Do not use any solvents or cleaning agents which may scratch the casing (powders, pastes, etc.).

The electronic system of the adapter does not require maintenance.

## 4 Storage

Before storage, make sure that the adapter is dry.

## 5 Dismantling and utilization

Worn-out electric and electronic equipment should be gathered selectively, i.e. it must not be placed with waste of another kind.

Worn-out electronic equipment should be sent to a collection point in accordance with the law of waste electrical and electronic equipment.

Before the equipment is sent to a collection point, do not dismantle any elements.

Observe local regulations concerning disposal of packages, waste batteries and accumulators.

## 6 Technical data

- a) insulation type acc. to EN 61010-1 ..... double
- b) measurement cat. acc. to EN 61010-1 .....IV 600 V
- c) protection class acc. to EN 60529 ..... IP40
- d) dimensions ..... ca. 170 x 85 x 35 mm
- e) weight (with cables) ..... ca. 0.6 kg
- f) operating temperature ..... -5°C...+50°C
- g) humidity ..... 20%...90%
- h) storage temperature ..... -20°C...+60°C

## 7 Manufacturer

The manufacturer of the device and provider of guarantee and post-guarantee service:

### SONEL S.A.

Wokulskiego 11  
58-100 Świdnica  
Poland

tel. +48 74 858 38 60  
fax +48 74 858 38 09

E-mail: [export@sonel.pl](mailto:export@sonel.pl)  
Web page: [www.sonel.pl](http://www.sonel.pl)

### Note:

Service repairs must be performed only by the manufacturer.