




Adding an autoprocudure

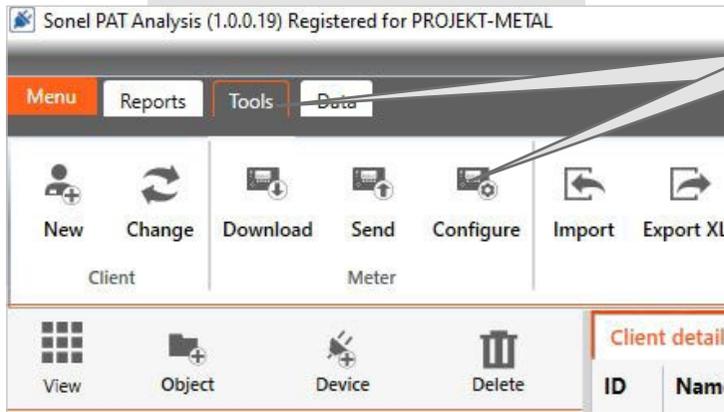

Go to **Tools** tab and then click **Configure**.

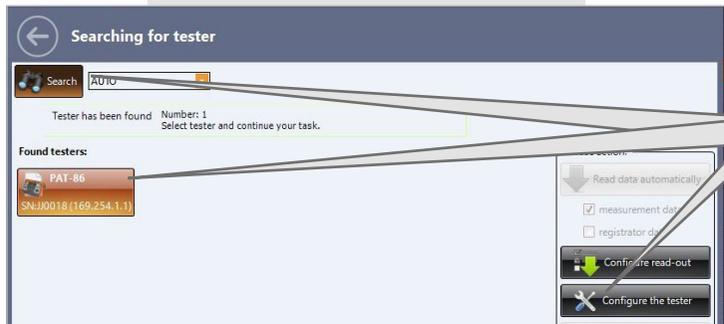


Search for the meter and click **Configure the tester**. Enter the PIN code (standard **123**).

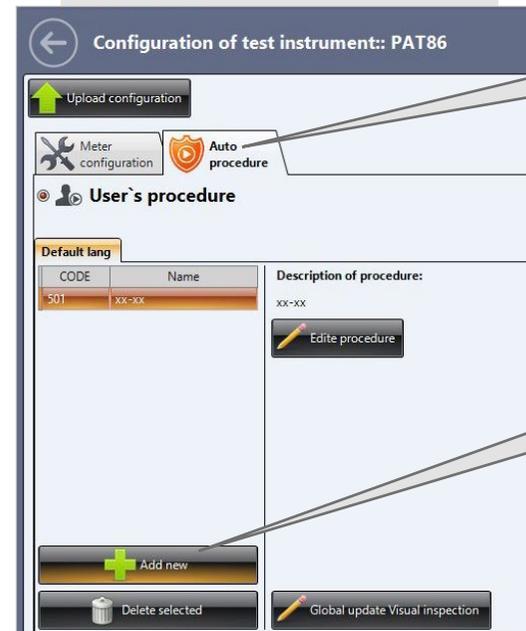


Go to **Autoprocudure** tab.

Add a new autoprocudure. Follow the instructions on **page 2**. The created procedure will appear in the list of automatic tests.

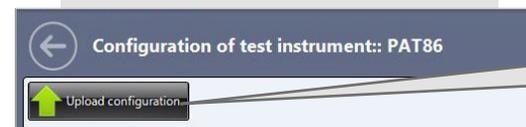

Send the configuration to the meter.

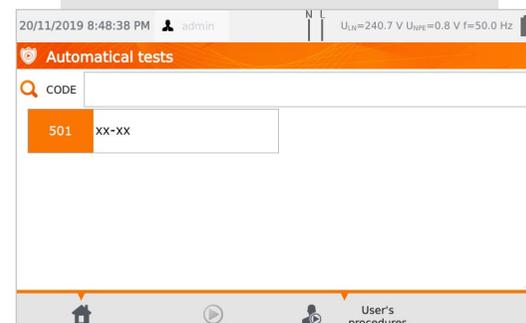

Autoprocedure configuration

Enter the code, name and - optionally - description.

Add new

Code: 501

Name: xx-xx

Description: xxx-xxx

Switch on the measurement and set its parameters.

Visual inspection Switch on

RPE

RISO

Test current [A]: 0,2

Duration of test[s]: 10

Limit Rpe[Ω]: 0,1

Test method: Probe to socket

Visual inspection Switch on

RPE

RISO

Test current [A]: 10

Duration of test[s]: 10

Limit Rpe[Ω]: 0,1

Test method: Probe to socket

Add new

Code:

Name:

Description:

Multibox

Switch on

Test current [A]: 0,2

Duration of test[s]: 10

Limit Rpe[Ω]:

Test method: Probe to socket

Continuous test test

Merged meters:

- PAT810
- PAT815
- PAT820
- METROiPAT
- PAT810plus
- PAT815plus
- PAT815plus
- PAT820plus

Visual inspection

RPE

RISO

ISUB

IPE

IA

It

Flash Test

Power test

IEC

RCD

PRCD

OK Cancel

Select the meter for which you are creating the procedure.

Merged meters:

- METROiPAT
- PAT810plus
- PAT815plus
- PAT820plus
- METROiPATplus
- PAT8x

Enable the **Multibox** function if required.

Multibox

Save changes.