
Multi-function meter of electrical system parameters



MPI-540 / 540-PV



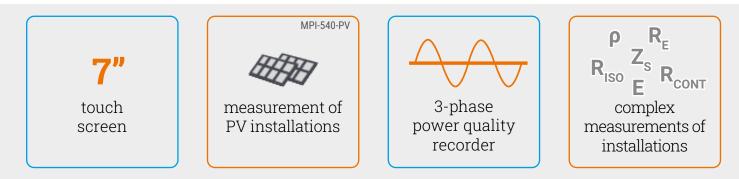

Much more than a multifunctional meter

- The largest touch screen on the market (7") remarkable ergonomics and ease of use
- Removable microSD memory card easy increase of memory capacity
- Li-lon battery longer operation of the meter
- MPI-540-PV | Measurement of photovoltaic installations according to EN 62446 standard
- MPI-540-PV | Cooperation with solar radiation and temperature meter
- MPI-540-PV | Photovoltaic installation test report with Sonel Reports PLUS software
- Three-phase power recorder advanced power quality diagnostics
- Real time display of network parameters immediate evaluation of the test site conditions
- Parameters measured in accordance to class S of EN 61000-4-30 standard high accuracy of measurements
- Energy cost calculator quick evaluation of potential savings
- Measurement of all parameters related to earthing and protection against electric shock one device instead of several
- Quick measurement of the fault loop impedance in networks secured with RCD without triggering (up to several seconds) – time saver
- Auto measurements the ability to perform automatic measurements in sequence simplified measurements
- Fast path from measurements to report time saver















Features

The meter has **above-average functionality**. It combines the measuring capabilities of several devices, while ensuring equally good accuracy.

- The **MPI-540-PV** instrument can measure photovoltaic installations in accordance with the EN 62446 standard:
 - » continuity of protective and equipotential bondings,
 - » earth resistance,
 - » insulation resistance on the DC side,
 - » open circuit voltage U_{oc},
 - » short circuit current I_{sc},
 - » work currents and powers on both DC and AC side,
 - » inverter efficiency.
- MPI-540 / MPI-540-PV can record 50/60 Hz power quality parameters in accordance to S class of EN 61000-4-30:
 - » voltage L1, L2, L3, average values in the range up to 500 V,
 - » L1, L2, L3 currents, average values, current measurement in the range up to 3 kA (depending on the current probes used),
 - » frequency in the range of 40 Hz 70 Hz,
 - $\ensuremath{\,{\scriptscriptstyle \times}}$ active (P), reactive (Q) and apparent (S) power,
 - » power factor (PF), cosφ, tanφ,
 - » harmonics (up to 40th for voltage and current),
 - » total harmonic distortion (THD) for current and voltage,
 - » recording of events for current and voltage,
 - » energy flow 4 quadrants.
- MPI-540 / MPI-540-PV can be used for all measurements for commissioning of electrical installations in accordance with applicable regulations:
 - » short circuit loop impedance (also in circuits secured with RCDs),
 - » RCD parameters,
 - » insulation resistance,
 - » earth resistance (4 measurement methods + soil resistivity measurement),
 - » continuity of protective and equipotential bondings,
 - » light intensity measurement,
 - » phase sequence test,
 - » motor rotation direction test.

Automatic installation safety test

MPI-540 / MPI-540-PV allow safety control of **residential, commercial and industrial electrical installations**. Measurements can be easily automated with:

- auto mode of residual current devices (RCD) tests,
- auto measurements freely configurable measuring sequences,
- AutoISO-1000C adapter for automatic insulation resistance test of 3-, 4and 5-conductor cables, without switching.

Photovoltaics under supervision

MPI-540-PV is an extremely universal meter, designed in particular for testing photovoltaic installations. The device allows a complete set of tests on the DC and AC side – in accordance with the guidelines of EN 62446 standard.

Measuring parameters related to the photovoltaic installation, the instrument will automatically convert them to the STC (Standard Test Conditions) reference conditions. Measurements of voltage, current and power on the AC and DC side of the inverter allow to verify its efficiency. **Sonel Reports PLUS** software enables creating PV installation test report with measurement results saved meter's in memory.




Three-phase power quality recorder

The device has a three-phase power quality recorder with the LIVE mode view and the possibility to register electrical network parameters such as voltage, current, power, harmonics and THD. The meter enables reading of selected parameters and their graphic presentation on the screen in real time. These parameters are measured and displayed concurrently with the recording on the memory card. In the LIVE mode, the user can see:

- voltage and current waveforms (oscilloscope),
- voltage and current timeplots,
- a phasor graph,
- display of multiple parameters in tabular form,
- spectrum graph of current and voltage harmonics.

Ease of reading

The device is equipped with a color TFT LCD touch screen with a resolution of 800x480 pixels and a diagonal of 7", which allows for convenient operation and easy reading of parameters and plotted waveforms. This screen size enables displaying more information, available at any time of use. The interface is visible in all conditions – also thanks to the appropriate size of displayed symbols. **Included stylus allows to work also with dielectric gloves.**

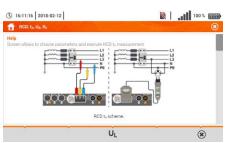

Built-in help system

The device has built-in help screens with measurement diagrams. Thanks to this you can easily and quickly check and make sure how to connect to a given system depending on the type of performed measurement.





Increased resistance to environmental conditions

The MPI-540 / MPI-540-PV meter will cope well in difficult environmental conditions. Protection against penetration of dust and water is ensured by a unique housing with a level of protection IP51. It is resistant to mechanical damage, and a special design allows you to easily protect the touch screen by shielding using the cover of the meter. In addition to the fact that it protects against damage, it also allows you to conveniently carry and use the device in different positions.

Communication and software

A very strong feature of the device is the multitude of communication interfaces and cooperation with external software. You can easily transfer measurement data to your computer via USB port, removable SD memory card, or wireless communication (Bluetooth, Wi-Fi).

In order to generate a report on measurements for electric shock protection, use **Sonel Reports PLUS** software. Saving the downloaded data to the simplest formats and printing is provided by free **Sonel Reader** software. The specialized, free **Sonel Analysis** software is used to read and analyze data from the power quality recorder.



IRM-1 MPI: solar radiation measurement set

Features

- Measurement of solar radiation and temperature.
- The LoRa interface for communication with a master meter offers a larger range than the Bluetooth technology!
- Built-in recorder that can be used to record solar radiation before constructing PV systems, as well as to measure the shading of existing systems.
- Large measurement memory: 999 cache memory cells and 5000 recorder records available (one-time recording) with the option of overwriting them (continuous recording).

Measured parameters

- Solar radiation intensity (irradiance) in W/m² or BTU/ft²h.
- PV panel temperature in °C or °F.
- Ambient temperature in °C or °F.
- Inclination angle of panels
- Orientation of the panels with the built-in compass.



Aeasurement functions	Measurement range	Display range	Resolution	Accuracy ±(% m.v. + digits)
ault loop impedance				
Fault loop $Z_{L-PE'} Z_{L-N'} Z_{L-L}$	0.13 Ω1999.9 Ω acc. to IEC 61557	0.000 Ω1999.9 Ω	from 0.001 Ω	±(5% m.v. + 30 digits)
Fault loop Z_{L-PE} in RCD mode	from 0.50 Ω1999 Ω acc. to IEC 61557	0.00 Ω1999 Ω	from 0.01 Ω	from ±(6% m.v. + 5 digits)
Aeasurements of RCD parameters				
RCD tripping test and measurement of trippin measuring current 0.5 $I_{\Delta n'}$ 1 $I_{\Delta n'}$ 2 $I_{\Delta n'}$ 5 $I_{\Delta n}$	ng time t _A			
general and short-time delay RCD	0 ms300 ms	0 ms300 ms	1 ms	from ±(2% m.v. + 2 digits)
selective RCD	0 ms500 ms	0 ms500 ms	1 ms	from ±(2% m.v. + 2 digits)
Measurement of RCD tripping current I_A measuring current 0.2 $I_{\Delta n}$ 2.0 $I_{\Delta n}$				
for sinusoidal residual current (AC type)	3.3 mA1000 mA	3.3 mA1000 mA	from 0.1 mA	$\pm 5\% I_{\Delta n}$
for unidirectional residual current and unidirectional with the 6 mA DC bias (type A)	3.5 mA700 mA	3.5 mA700 mA	from 0.1 mA	$\pm 10\%$ I _{Δn}
for direct residual current (type B)	2.0 mA1000 mA	2.0 mA1000 mA	from 0.1 mA	$\pm 10\% I_{\Delta n}$
Earth resistance				
3- and 4-pole method	from 0.50 Ω1.99 kΩ acc. to IEC 61557-5	0.00 Ω1.99 kΩ	from 0.01 Ω	from ±(2% m.v. + 3 digits)
3-pole + clamp method	0.00 Ω1.99 kΩ	0.00 Ω1.99 kΩ	from 0.01 Ω	from ±(2% m.v. + 4 digits)
2-clamp method	0.00 Ω99.9 kΩ	0.00 Ω99.9 kΩ	from 0.01 Ω	from ±(10% m.v. + 4 digits
Resistance-to-earth	0.0 Ωm99.9 kΩm	0.0 Ωm99.9 kΩm	from 0.1 Ωm	Depending on accuracy of R _e measurement
nsulation resistance				
Measuring voltage 50 V	50 kΩ250 MΩ acc. to IEC 61557-2	0 kΩ250 MΩ	from 1 kΩ	from ±(3% m.v. + 8 digits)
Measuring voltage 100 V	100 kΩ500 MΩ acc. to IEC 61557-2	0 kΩ500 MΩ	from 1 kΩ	from ±(3% m.v. + 8 digits)
Measuring voltage 250 V	250 kΩ999 MΩ acc. to IEC 61557-2	0 kΩ999 MΩ	from 1 kΩ	from ±(3% m.v. + 8 digits)
Measuring voltage 500 V	500 kΩ2.00 GΩ acc. to IEC 61557-2	0 kΩ2.00 GΩ	from 1 kΩ	from ±(3% m.v. + 8 digits)
Measuring voltage 1000 V	1000 kΩ4.99 GΩ acc. to IEC 61557-2	0 kΩ9.99 GΩ	from 1 kΩ	from ±(3% m.v. + 8 digits)
Resistance of protective conductors and equi	potential bondings			
Measurement of resistance of protective conductors and equipotential bondings with ±200 mA current	0.12 Ω400 Ω acc. to IEC 61557-4	0.00 Ω400 Ω	from 0.01 Ω	±(2% m.v. + 3 digits)
Measurement of resistance with low current	0.0 Ω1999 Ω	0.0 Ω1999 Ω	from 0.1 Ω	±(3% m.v. + 3 digits)
ight intensity				
Measurement in luxes (lx)	0 lx399.9 klx	0 lx399.9 klx	from 0.001 lx	from ±(2% m.v. + 5 digits)
Measurement in feet-candles (fc)	0 fc39.99 kfc	0 fc39.99 kfc	from 0.001 fc	from ±(2% m.v. + 5 digits)

Specifications – 3-phase power quality recorder

The device is designed to work with mains:

- » with nominal frequency 50/60 Hz
- with nominal voltage: 64/110 V, 110/190 V, 115/200 V, 127/220 V, 220/400 V, 200/400 V,
- 220/380 V, 230/400 V, 240/415 V, 254/440 V, 290/500 V
- » DC networks

Supported systems:

- » single-phase
- » split-phase with common N
- » three-phase WYE with and without N conductor
- » three-phase Delta

Parameter	Measuring range	Max. resolution	Accuracy
Alternating voltage (TRMS)	0.0500 V	0.01% U _{nom}	±0.5% U _{nom}
Alternating current (TRMS)	depending on clamp*	0.01% I _{nom}	$\pm 2\%$ m.v. if m.v. ≥ 10% I _{nom} $\pm 2\%$ I _{nom} if m.v. < 10% I _{nom} (error does not account for clamp error)
Frequency	40.0070.00 Hz	0.01 Hz	±0.05 Hz
Active, reactive, apparent and distortion power	depending on configuration (transducers, clamps)	4 significant digits	depending on configuration (transducers, clamps)
Active, reactive and apparent energy	depending on configuration (transducers, clamps)	4 significant digits	as power error
cosφ and power factor (PF)	0.001.00	0.01	±0.03
Harmonics			
Voltage	as for alternating voltage True RMS	as for alternating voltage True RMS	±5% m.v. if m.v. ≥ 3% U _{nom} ±0.15% U _{nom} if m.v. < 3% U _{nom}
Current	as for alternating current True RMS	as for alternating current True RMS	±5% m.v. if m.v. ≥ 10% I _{nom} ±0.5% I _{nom} if m.v. < 10% I _{nom}
THD			
Voltage	0.0100.0%		
Current	(relative to RMS value)	0.1%	±5%
Unbalance factor	r 0.010.0%		±0.15% (absolute error)

* F-1A, F-2A, F-3A clamp: 0...3000 A AC (10 000 A_{pp}) • C-4A clamp: 0...1000 A AC (3600 A_{pp}) • C-5A clamp: 0...1000 A AC/DC (3600 A_{pp}) • C-6A clamp: 0...10 A AC (36 A_{pp}) • C-7A clamp: 0...100 A AC (360 A_{pp})

	R			×	Ö	\bigcirc	Q
	C-4A	C-5A	C-6A	C-7A	F-1A	F-2A	F-3A
	WACEGC4A0KR	WACEGC5AOKR	WACEGC6AOKR	WACEGC7A0KR	WACEGF1AOKR	WACEGF2A0KR	WACEGF3A0KR
Rated current	1000 A AC	1000 A AC 1400 A DC	10 A AC	100 A AC		3000 A AC	
Frequency	30 Hz10 kHz	DC5 kHz	40 Hz10 kHz	40 Hz1 kHz		40 Hz10 kHz	
Max. diameter of measured conductor	52 mm	39 mm	20 mm	24 mm	380 mm	250 mm	140 mm
Minimum accuracy	≤0.5%	≤1.5%	≤1%	0.5%		0.5%	
Battery power	_	\checkmark	_	_		_	
Lead length	2.2 m	2.2 m	2.2 m	3 m		2.5 m	
Measurement category	IV 300 V	IV 300 V	IV 300 V	III 300 V		IV 600 V	
Ingress protection		IF	240			IP67	

MPI-540-PV | Specifications – photovoltaic installation parameters –

Measurement functions	leasurement functions Display range		Accuracy ±(% m.v. + digits)		
Open circuit voltage U _{oc}	0.0 V1000 V	from 0.1 V	from ±(3% m.v. + 2 digits)		
Short circuit current I _{sc}	0.00 A20.00 A	0.1 A	±(3% m.v. + 0.10 A)		

Other technical data

Safety and work conditions

Measuring category according to EN 61010	IV 300 V, III 500 V MPI-540-PV II 1000 V DC				
Ingress protection	IP51				
Type of insulation according to EN 61010-1 and IEC 61557	double				
Dimensions	288 x 223 x 75 mm 11.3" x 8.8" x 3.0"				
Veight	ca. 2.5 kg 5.5 lbs				
Operating temperature	0+45°C 32113°F				
Storage temperature	-20+60°C -4140°F				
Humidity	2090%				
Nominal temperature	23 ± 2°C				
Reference humidity	40%60%				
Memory and communication					
Memory of measurement results	unlimited				
Data transmission	USB 2.0				
Other information					
Quality standard – development, design and production	ISO 9001				
The product meets the EMC (emission for industrial environment)	EN 61326-1				
requirements according to standards	EN 61326-2-2				



Standard accessories

		MPI-540-PV Solar	MPI-540-PV Solar Start	MPI-540-PV	MPI-540-PV Start	MPI-540	MPI-540 Start
		WMUSMPI540PVIRM1	WMUSMPI540PVSIRM1	WMUSMPI540PV	WMUSMPI540PVNC	WMUSMPI540	WMUSMPI540NC
Ē	IRM-1 solar radiation and temperature meter WMUSIRM1	1	1				
3	IRM-1 mounting&measuring set WASONTPVCKPL	1	1				
190	5 V power supply with USB 2.0 output and a detachable micro-USB cable WAZASZ24	1	1				
	LORA-S1 adapter for data transmission WAADAUSBLORA	1	1				
~	PVM-1 adapter WAADAPVM1	1	1	1	1		
-0-	MC4-banana sockets adapter (set) WAADAMC4	1	1	1	1		
0-	C-PV clamp WACEGCPVOKR	1	1	1	1		
~~ ³⁶⁰	Adapter for C-PV clamp	1	1	1	1		
-2-	F-3A flexible clamp (Ø 120 mm) WACEGF3AOKR	3	3	3		3	
\mathcal{O}	Test lead 1.2 m (banana plugs) black / red / blue / yellow WAPRZ1X2BLBBN / WAPRZ1X2REBB / WAPRZ1X2BUBB / WAPRZ1X2YEBB	1/1/1/1	1/1/1/1	1/1/1/1	1/1/1/1	1/1/1/1	1/1/1/1
11	Crocodile clip 1 kV 20 A black / red / blue / yellow WAKROBL20K01 / WAKRORE20K02 / WAKROBU20K02 / WAKROYE20K02	1/1/1/1	1/1/1/1	1/1/1/1	1/1/1/1	1/1/1/1	1/1/1/1
بلا بلا ملا بلا	Pin probe 1 kV (banana sock- et) red / blue / yellow WASONREOGB1 / WASONBUOGB1 / WASONYEOGB1	1/1/1	1/1/1	1/1/1	1/1/1	1/1/1	1/1/1
	Test lead 15 m, blue (on a reel) WAPRZ015BUBBSZ	1	1	1	1	1	1
0	Test lead 30 m, red (on a reel) WAPRZ030REBBSZ	1	1	1	1	1	1

Standard accessories

		MPI-540-PV Solar	MPI-540-PV Solar Start	MPI-540-PV	MPI-540-PV Start	MPI-540	MPI-540 Start
		WMUSMPI540PVIRM1	WMUSMPI540PVSIRM1	WMUSMPI540PV	WMUSMPI540PVNC	WMUSMPI540	WMUSMPI540NC
	Earth contact test probe (rod), 30 cm WASONG30	2	2	2	2	2	2
	Voltage adapter with M4/ M6 thread (set of 4 pcs.) WAADAM4M64	1	1	1	1	1	1
\bigcirc	USB cable WAPRZUSB	1	1	1	1	1	1
4a + 893	4 GB microSD card WAPOZMSD4	1	1	1	1	1	1
100	Mains cable with IEC C7 plug WAPRZLAD230US	1	1	1	1	1	1
S	Z-7 power supply WAZASZ7	1	1	1	1	1	1
15	Cable for battery charging from car cigarette lighter socket (12 V) WAPRZLAD12SAM	1	1	1	1	1	1
1. Second	Li-Ion battery 11.1 V 3.4 Ah WAAKU15	1	1	1	1	1	1
/	Touchscreen pen WAPOZTPEN	1	1	1	1	1	1
	L-2 hanging straps (set) WAPOZSZEKPL	1	1	1	1	1	1
	Carrying case M-13 WAFUTM13			1	1		
	L-2 carrying case WAFUTL2			1	1	1	1
	L-19 backpack WAFUTL19	1	1				
	Factory calibration certificate - MPI-540-PV	1	1	1	1	1	1
() ()	Factory calibration certificate - IRM-1	1	1				

Optional accessories



IRM-1 MPI solar radiation measurement set only for MPI-540-PV / MPI-540-PV Start

F-1A flexible clamp

WMGBIRM1MPI

(Ø 360 mm)

WACEGF1A0KR



LORA-S1 adapter for data transmission only for MPI-540-PV / MPI-540-PV Start WAADAUSBLORA

F-2A flexible clamp

(Ø 235 mm)

WACEGF2AOKR

C-4A clamp

(Ø 52 mm)

1000 A AC

WACEGC4AOKR



EVSE-01 adapter for testing vehicle charging stations

WAADAEVSE01

F-3A flexible clamp (Ø 120 mm) only for MPI-540 Start / MPI-540-PV Start WACEGF3AOKR



C-3 clamp (Ø 52 mm) WACEGC30KR



C-6A clamp (Ø 20 mm) 10 A AC WACEGC6AOKR



Three-phase socket adapter 16 A / 32 A WAADAAGT16C WAADAAGT32C

Industrial socket

WAADAAGT16T WAADAAGT32T

Cramp with

WAZACIMA1

LP-10A light

WS-06 plug set WAADALP10AKPL

only probe with

miniDIN-4P plug

WAADALP10A

WAADAWS06

meter probe with

banana socket

adapter 16 A / 32 A



(Ø 24 mm) 100 A AC WACEGC7AOKR

C-7A clamp

Three-phase socket adapter 16 A / 32 A WAADAAGT16P WAADAAGT32P

Test lead for fault loop measurement (banana plugs) 5 m / 10 m / 20 m

WAPRZ005REBB WAPR7010RFBB WAPRZ020REBB

Earth contact test probe 80 cm WASONG80V2

LP-10B light meter probe with

WS-06 plug

set WAADALP10BKPL only probe with

miniDIN-4P plug WAADALP10B

only WS-06 adapter with miniDIN-4P socket WAADAWS06

Calibration certificate with accreditation



(Ø 39 mm) 1000 A AC/DC WACEGC5AOKR

C-5A clamp

N-1 transmitting clamp (Ø 52 mm) WACEGN1BB

Three-phase socket adapter 63 A

WAADAAGT63P

Test lead for earth resistance measurement 25 m / 50 m

WAPRZ025BUBBSZ WAPRZ050YEBBSZ

L-3 carrying case (for 80 cm test probes)

WAFUTL3

LP-1 light meter probe with WS-06 plug

set WAADALP1KPL

only probe with miniDIN-4P plug WAADALP1

only WS-06 adapter with miniDIN-4P socket WAADAWS06



only WS-06 adapter with

miniDIN-4P socket

WS-03 adapter with START button with UNI-Schuko plug WAADAWS03US









